 


Sleep Advanced / Sit Advanced

Wireless Bed/Chair Occupancy Sensors

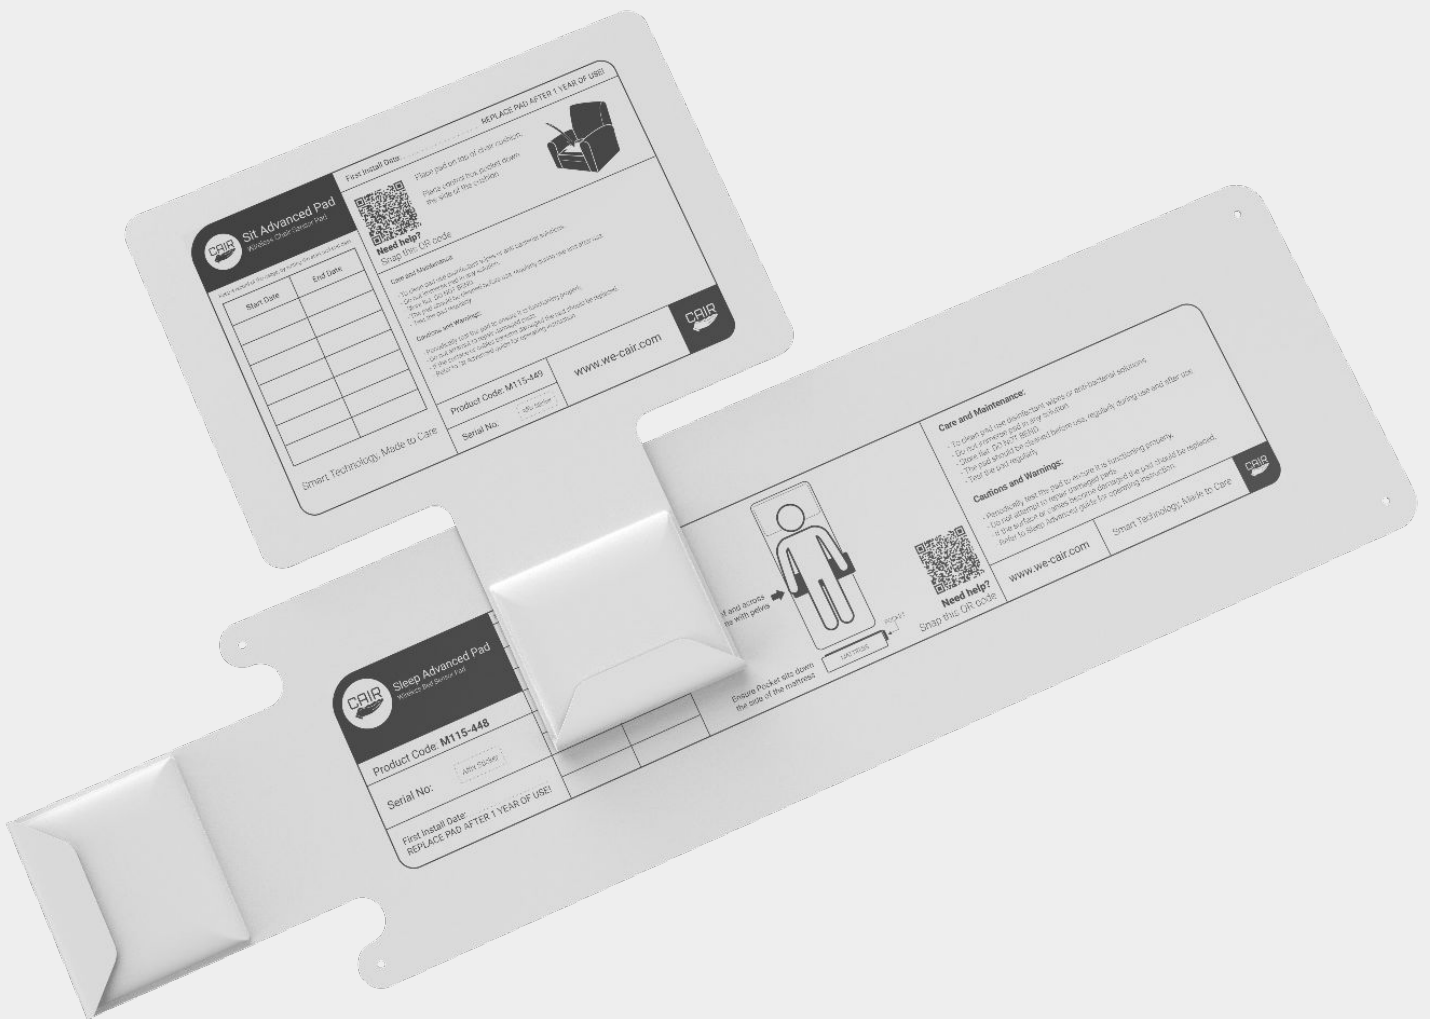

The Sleep Advanced and Sit Advanced are all in one bed/chair occupancy sensors with no visible wires.

Simple and easy to use, the devices contain an occupancy mat and small control unit within a single, wipe clean enclosure. The absence of wires means that the unit is less likely to be tampered with, or accidentally disturbed. Fixing holes in each corner allow the device to be secured if required. Both bed and chair versions are available.

Sleep Advanced / Sit Advanced

Wireless Bed/Chair Occupancy Sensors






Sleep/Sit Advanced

Features list

- Easy to program and use
- Bed and chair versions available
- Simple on/off switch
- Virtual Sensor compatibility
- Multiple absence delay options
- Fixing holes in each corner
- Wipe clean enclosure

Specifications

Compatibility	Tunstall
Operating Frequency	869 MHz
Part Numbers	Sleep Advanced - Sleep Advanced Replacement Pad - Sit Advanced - Sit Advanced Replacement Pad - Detect Mini -
Dimensions	Sleep Advanced - L950 x W260 x D20 mm Sit Advanced - L440 x W390 x D20 mm (at widest points)
Input	1x Custom input
Power Supply	Renata CR2477 Coin battery (User replaceable)
Battery Life	2 years with typical usage
Wireless Range	Up to 600m line of sight
Compliance	UKCA / CE / RoHS 2 / RED
Warranty	24 months

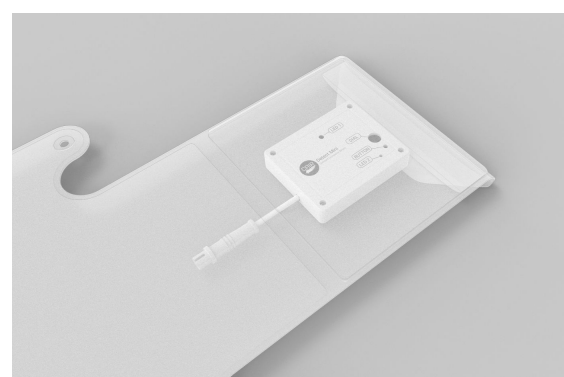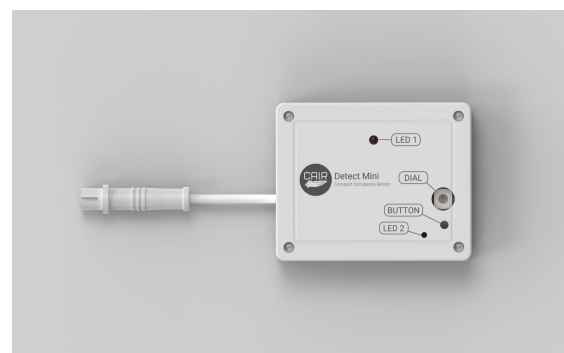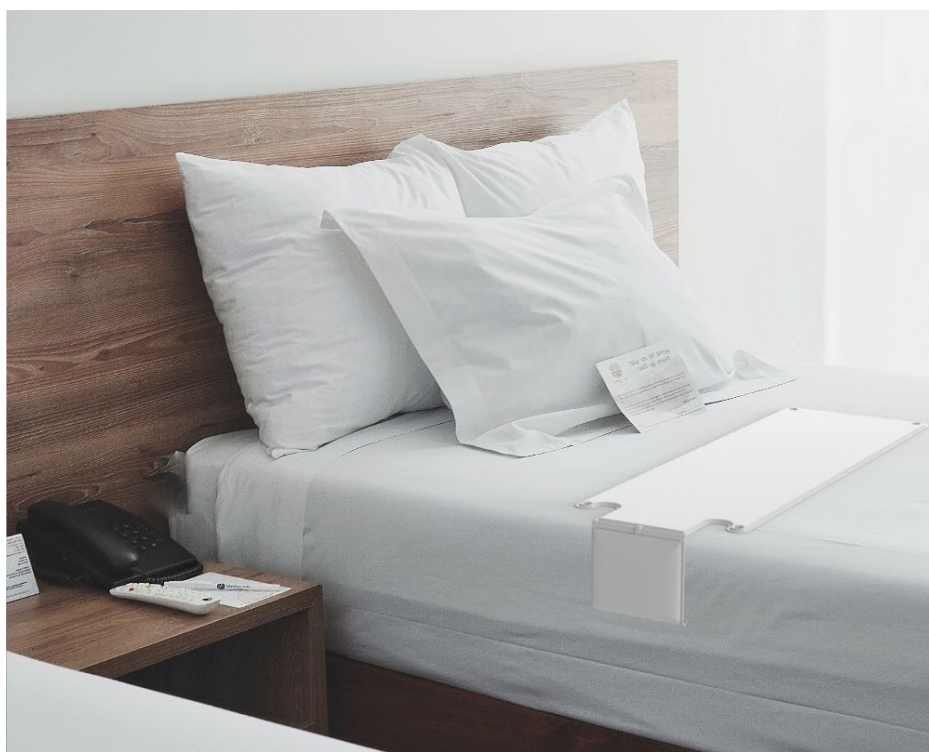   

Cair (UK) Ltd.

Hanson Lane, Halifax, West Yorkshire, HX1 4SD

T: 01422 399 155 E: sales@we-cair.com W: www.we-cair.com