

Specifications

Operating Frequency	869.2125 MHz radiating less than 10mW (Other custom frequencies possible)
Dimensions	H90 x W90 x D73 mm
Power Supply	Sealed lithium battery
Transmitter Battery Life	Up to 10 years
Device Life	10 years
Wireless Range	Up to 600m line of sight
Compliance	CE / RoHS 2 / RED
Warranty	24 months

Batteries / Lifespan of Alarm

The heat alarm contains a non-user replaceable lithium battery, which should last up to 10 years, dependent upon use and the environment in which it is located. Extended periods in alarm mode will significantly reduce the life of the battery. In the event of a low battery, the unit will beep every 60 seconds. When the heat alarm battery becomes low, the complete heat alarm unit must be replaced.

Irrespective of the battery life, the heat alarm has a fixed 10 year lifespan indicated by the date printed on the side of the alarm. The alarm must be replaced by this date.

The radio transmitter within the pattress contains a 3V lithium coin cell battery which is also not replaceable by the user. Typically, the battery will last up to 10 years dependent upon the application. When the battery depletes, the complete transmitter unit must be replaced. It is also recommended that the entire heat alarm is replaced.

Packing for shipment

The equipment containing cells or batteries must be packed in strong rigid packaging and must be secured against movement within the outer packaging to prevent accidental activation. The sender's name and return address must be clearly visible on the outer packaging.

Safety


Do not dismantle or alter the unit. Do not open the case. Indoor use in dry location only.

Disposal

All electronic waste should be disposed of in accordance with the latest legislation. It must be disposed of within the electrical and electronic waste stream and not be disposed of in the normal waste stream. Recycling electrical waste products (including the lithium batteries contained within) help to conserve natural resources and prevent adverse effects on the environment. Contact your supplier should you require more information.

Declaration of Conformity

Hereby, Cair (UK) declares that the radio equipment type Heat Alarm is in compliance with Directive 2014/53/EU.

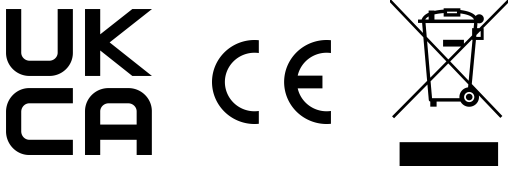

Cair (UK)
Hanson Lane, Halifax, West Yorkshire, HX1 4SD
T: 01422 399 155 E: sales@we-cair.com W: www.we-cair.com



Smart Technology, Made to Care

Heat
Heat Alarm



The Heat Alarm is a discreet, compact unit which is specifically designed for applications where smoke alarms would be unsuitable, such as kitchens, garages and dusty areas.

When activated, a loud audible alert will be emitted and a radio message will be sent to the alarm receiving device.



Figure 2

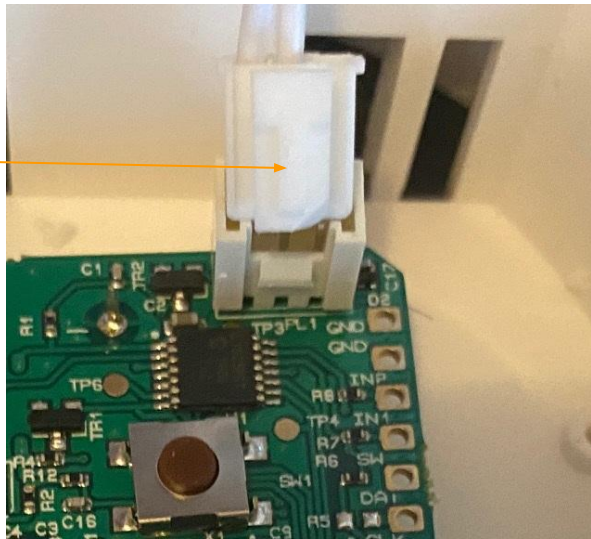


Figure 1



Figure 3

Product Description

The Heat Alarm is a discreet, compact unit which is specifically designed for applications where smoke alarms would be unsuitable, such as kitchens, garages and dusty areas. When activated, a loud audible alert will be emitted and a radio message will be sent to the alarm receiving device. The Heat is Class A1 against BS 5446-2 meaning it will alarm from 54 to 65°C upwards. The device comes complete with a pattress containing Cair’s radio transmitter interface. The pattress also provides mounting options for securing the heat alarm to the ceiling. **Note:** This is a supplementary guide to the manufacturer’s User Manual. Please read both documents before installing and using the heat alarm.

Positioning

This section contains general details on positioning the heat alarm. Please refer to the manufacturer’s User Manual enclosed with the alarm for full details relating to correct positioning. The heat alarm should be mounted on the ceiling in the middle of a room, and at least 300mm away from walls, light fittings, doors, windows, vents and bathrooms/shower rooms. Ensure the chosen location is also within range of the alarm receiving device.

Note: Do not install the heat alarm on a wall.

Installation

The pattress can be secured to the ceiling using the enclosed fixings. Once the pattress is mounted, the wire from the heat alarm should be plugged into the radio interface, ensuring that the plug is orientated correctly and a click is heard (see figure 1). To assemble the heat alarm, first ensure that the wire is folded neatly into the pattress. Align the line on the head with the arrow on the base (figure 2) then turn the head clockwise until the locking tag clicks into place (figure 3). This action will also switch the heat alarm on. The heat alarm can now be activated using the test button on the front surface of the unit to ensure that it is functioning correctly and that the radio transmitter operates. To separate the heat alarm from the pattress, depress the locking tag and turn the unit anti-clockwise. This action will also switch the heat alarm off.

Assigning the Heat to a Notifier or other receiving system

- 1. Secure the Heat into the mounting plate
- 2. Prepare the Notifier/other system by entering registration mode.
- 3. Activate the Heat
- 4. The Notifier/other system should acknowledge the new device.

Status Indications

The heat alarm features a sounder and a red LED indicator which is on the front of the unit. The flashing LED and/or associated beeps indicate the following conditions:

- **Power** - One brief flash every minute with no beep confirms the unit is powered correctly
- **Low Battery** - One flash every minute with one beep indicates a low battery
- **Test Button Jammed** - A single beep every 11 seconds indicates the test button is stuck
- **Fault** - A double beep every minute indicates a fault or malfunction
- **Test** - Repeated flashing of the LED and a single series of 3 beeps
- **Alarm** - Repeated flashing of the LED every second and a series of 3 beeps sounding every 4 seconds
- **Alarm Silenced** - Brief flash every 12 seconds is an alarm condition with the alarm having been silenced

Testing

Testing should take place weekly to ensure correct operation, and also to check that the link to the alarm receiving device is still working. Testing can be carried out by simply pressing and holding the test button for a few seconds. The alarm should sound three times with a flashing LED and the radio transmitter should activate.

Note: The electronic test button provides a full test of the alarms functionality. Do not try to test the alarm using heat, smoke or a naked flame as damage will occur.

Silencing

The heat alarm can be silenced by momentarily pressing the test button. This is ideal for non-emergency situations where nuisance alarms may have been created. The red LED will flash every 12 seconds to remind you that the heat alarm has been silenced and will automatically reset to quiescent mode after 10 minutes.

Low battery warnings can also be silenced. As low battery alerts often arise during the night, the audible warning can be temporarily silenced for ten hours by momentarily pressing the test button.

Cleaning

The heat alarm should be cleaned regularly to ensure it works properly. The pattress can be cleaned with a very lightly dampened cloth. Do not use an abrasive material, any chemical cleaning agents or any other liquids to clean the pattress as these may damage the unit. Avoid using aerosol based cleaning agents as these may cause false alarms. The use of a vacuum cleaner with soft brush to remove dust is advisable and will help to keep the unit working efficiently.